









Cassette Reel

<p>1) Open the shutter by gripping lever. New cleaning tape will appear.</p>	<p>2) Push and slide a ferrule end face while gripping the lever</p>
<p>3) Close the shutter by releasing the grip.</p> 	
<h3>How to replace the Cassette Reel.</h3>	
<p>1) Turn the screw with a coin, Open the cover. Take out the cassette reel and the winding reel.</p>	<p>2) Pull out the tape from the winding reel.</p>
	
<p>3) Load the new tape on the winding reel with a bonding tape.</p>	<p>4) Set up the winding reel and the cassette reel in the body. Set the tape (cleaning cloth on the outside of guide roller and between wiping board and template).</p>
	
<p>5) Hook the cover on the body.</p>	<p>6) Grip the lever 2 or 3 times and to check the tape is moving smoothly.</p>
